

*Christmas  
Collection*

## Congratulations!

Your new WERSI OAS software expansion pack 'Christmas Collection' is one of the most fun and naturally festive software titles that we've ever produced. This software pack contains a mixture of Registrations, Realdrums and of course Styles.

OK, so you probably now want to get started. Please follow the loading instructions below:

### Loading Instructions:

#### Registrations (Total Presets)

1. Insert your CD/DVD or USB device into the CD/DVD or USB drive.
2. Press the 'Settings' tab at the top right corner of the Main Display.
3. Press the 'OAS Database' Button in the central column of buttons.
4. A new small window will appear. Press the button marked 'Total Preset Manager' at the bottom of the centre of the new window.
5. The Total Manager will now be displayed.
6. Press the 'Import' button.
7. Select the 'Drive' that is your instruments CD/DVD or USB drive.
8. Once you have selected your CD/DVD or USB drive, the Christmas Collection Registration Total Presets will be displayed. Press the 'Select All' button.
9. Now that the Total Presets are highlighted in Red, press the 'Load' button.
10. A new window will be displayed. Please select a free slot to save the Christmas Collection Total Preset Registrations and press 'Save'. Please be aware that any Total Presets that currently occupy any of the slots that you select, will be overwritten. Please take care to select only free / vacant slots.

#### Registration Recall Using Quickload

1. From the Main Display press the 'Quickload' button.
2. Press the 'Presets' button at the top of the screen (Left hand side)
3. Make sure that you have 'User Presets' selected for the menu displaying the Preset content of your OAS instrument.
4. Scroll down to the new Christmas Collection registrations' in the slots that you have saved them to.
5. Select the Total Preset registration from the list and press the large 'Load' button in the bottom right hand corner. Using 'Easy Preset'
1. From the Main Display press the 'Easy Preset' button.
2. Select the User Bank on the right hand side to navigate to the new registration Total Presets.
3. Simply select the desired registration displayed on the Easy Preset display for the entire instrument to be loaded instantly!

#### Loading Styles

1. Make sure that your CD/DVD or USB device is still inserted into your instrument.
2. Press the 'Settings' tab at the top right corner of the Main Display.
3. Press the 'OAS Database' Button in the central column of buttons.
4. A new small window will appear. Press the button marked 'ACC Manager'
5. The Accompaniment Manager will now be displayed.
6. At the far top left of the Red display, there is a drop down menu called 'ACC-Types'. Open this menu. Select 'Style' from the list.
7. Now press the button in the bottom right corner labelled 'ACC Load'
8. The WERSI File Explorer will open (Light Blue back ground). Use the button 'Change Directory' to navigate to your CD/DVD or USB drive.
9. Select the folder marked 'Styles'. The 10 Christmas Collection Styles will be shown on the right hand side.
10. Press the 'Select All' button.
11. Then press the 'OK' button.
12. The Yellow Save screen will open. Select a free location and Import the Styles. (Be careful not to overwrite any existing styles).

**You can then recall the Styles from the Quickload menu. They are under the 'Styles category' and obviously saved into the 'User' area.**

#### Loading Realdrums

1. Make sure that your CD/DVD or USB device is still inserted into your instrument.
2. Press the 'Settings' tab at the top right corner of the Main Display.
3. Press the 'OAS Database' Button in the central column of buttons.
4. A new small window will appear. Press the button marked 'ACC Manager'
5. The Accompaniment Manager will now be displayed.
6. At the far top left of the Red display, there is a drop down menu called 'ACC-Types'. Open this menu. Select 'Style' from the list.
7. Now press the button in the bottom right corner labelled 'ACC Load'
8. The WERSI File Explorer will open (Light Blue back ground). Use the button 'Change Directory' to navigate to your CD/DVD or USB drive.
9. Select the folder marked 'Realdrums'. The 4 Christmas Collection Realdrums will be shown on the right hand side.
10. Press the 'Select All' button.
11. Then press the 'OK' button.
12. The Yellow Save screen will open. Select a free location and Import the Realdrums. (Be careful not to overwrite any existing styles).

**You can then recall the User Realdrums from the Quickload menu. Please note: They are under the 'Style category' and obviously saved into the 'User' area.**

**The reason why User Realdrums are saved into the Style area and not Realdrums is because when you export a Realdrum, the file is exported as a 'Style - \*.stw format' for compatibility with the Pegasus Wing keyboard. Also, WERSI has now revised the Realdrum format with the last software build of the OpenArt-Arranger, meaning that new future options for expanding the Realdrum and Style format is possible.**

## Registration Total Presets

### **A Spaceman Came Travelling** (Tempo: Style / Realdrum:)

4 Total Presets. The Classic Christmas 'Chris De Burgh' hit is whimsical and festive.

### **Away In A Manager** (Tempo: N/A Style / Realdrum: No Accompaniment)

4 Total Presets. The traditional carol sang about Christ's birth.

### **Deck The Halls** (Tempo: 148 bpm Style / Realdrum: Xmas March 1)

4 Total Presets. The fast paced, charging march that always feels as though it gets faster, and faster and faster! Make sure your fingers are well oiled for this one!

### **Driving Home For Christmas** (Tempo: 192 bpm Style / Realdrum: BigBand Schnell)

4 Total Presets. The festive classic pop hit about returning from work to your family and loved ones. Always a good choice to get you into the mood!

### **Good King Wencelas** (Tempo: 96 bpm Style / Realdrum: Beat Oldie)

4 Total Presets. The king of Prague gets a good outing with this stomper of a classic.

### **Hark The Herald Angels Sing** (Tempo: 90 bpm Style / Realdrum: Easy Beat)

4 Total Presets. The beautiful carol that uses a lot of 'salvation army' style brass instruments, strings and organs!

### **In The Bleak Mid-Winter** (Tempo: N/A Style / Realdrum: No Accompaniment)

2 Total Presets. The Wintery, chilling sombre carol that really makes us reflect at WERSI about everything we have to be grateful for.

### **Jingle Bells** (Tempo: 114 bpm Style / Realdrum: Xmas March 1)

4 Total Presets. The bouncing party classic. Everyone knows the words, so let's party!

### **Last Christmas** (Tempo: 112 Style / Realdrum: RWN Xmas Disco Pop)

4 Total Presets. That cool Wham classic from the 1980's will put us all into the festive dancing mood.

### **Little Drummer Boy** (Tempo: N/A Style / Realdrum: No Accompaniment) - but can use **March River Kwai (also known as US-2/4 March on older instruments at a tempo of around 71 bpm, with or without Accompaniment).**

4 Total Presets. The sad and ethereal carol about the 'Little Drummer Boy'.

### **Merry Xmas Everyone** (Tempo: 104 bpm Style / Realdrum: Xmas March 1)

4 Total Presets. The Shakin Stevens party classic It certainly will make you wish that 'Snow is falling, all around you'.

### **Mistletoe & Wine** (Tempo: 138 bpm Style / Realdrum: Xmas Waltz 2)

4 Total Presets. Everyone needs a bit of Cliff Richards at Christmas time! Enjoy this classic Christmas number with your friends at your next Christmas Drinks Party!

### **O Come All Ye Faithful** (Tempo: N/A Style / Realdrum: No Accompaniment)

4 Total Presets. Another well-loved Christmas Carol.

### **O Holy Night** (Tempo: 64 bpm Style / Realdrum: REAL Xmas Slow Rock)

5 Total Presets. The wonderful festive classic - warm choirs, solo horns. A favorite among the nation.

### **Rocking Around the Christmas Tree** (Tempo: 128 bpm Style / Realdrum: Xmas Tree Bounce X)

4 Total Presets. You'll be rocking, bopping and merry in no time at all!

### **Santa Claus Is Coming To Town** (Tempo: 150 bpm Style / Realdrum: Xmas Rock N Roll)

4 Total Presets. Whether you've been naughty or nice, you'll get into the Christmas mood once again with this number.

## Registration Total Presets

### **Silent Night** (Tempo: 84 bpm Style / Realdrum: RWN Xmas Waltz Swing)

4 Total Presets. The beautiful festive 3/4 ballad is homely. Imagine some mulled wine, the winter chill outside and some soft candles lit. Perfection.

### **Step Into Christmas** (Tempo: 150 bpm Style / Realdrum: Xmas Rock N Roll)

4 Total Presets. The party rocker classic from Elton John.

### **White Christmas** (Tempo: 64 bpm Style / Realdrum: Xmas Slow Rock)

4 Total Presets. The Bing Cosby classic.

### **Winter Wonderland** (Tempo: 114 bpm Style / Realdrum: Xmas Tree Bounce X)

4 Total Presets. The wonderful 'Woolies' wonderland theme! Large Strings, bells and pretty things assured!

---

#### PLEASE NOTE:

The Registrations of the Christmas Collection require you to select the style for the Registration from the Quickload menu. The reason that this is so, is because depending on the individual configuration of the customers instrument, nearly every OAS model is different. Some customers will have the Styles 2011 upgrade, some will not. Some will have custom Accompaniment Mapping, some will not. Also, different instruments such as the Xenios, Ikarus and Giga-Piano have different button layouts, so again, we must ensure that our software is cross-compatible for every OAS model, so that every one can enjoy the software.

---

#### Styles

1. RWN Xmas Disco Pop
2. RWN Xmas Waltz Swing
3. Xmas 6-8 Ballad
4. Xmas March 1
5. Xmas Pop Ballad
6. Xmas Rock'n Roll
7. Xmas Rock
8. Xmas Twist
9. Xmas Waltz 2
10. Xmas Tree Bounce X

#### Realdrums

1. Real Ballad +
2. REAL Xmas 8 Beat
3. Real Xmas Party
4. Real Xmas Slow Rock

## MP3 Professional Backing Sequences

1. Driving Home For Christmas
2. Last Christmas (Key of C)
3. Merry Christmas Everyone
4. Rudolph The Red Nose Reindeer (Key of C)
5. Silent Night (Key of Bb) - 6/4 Rhythm - Michael Buble Version
6. White Christmas (Key of D Major)

#### Loading MP3

1. Make sure that your CD/DVD or USB device is still inserted into your instrument.
2. Press the 'Settings' tab at the top right corner of the Main Display.
3. Press the 'OAS Database' Button in the central column of buttons.
4. A new small window will appear. Press the button marked 'ACC Manager'
5. The Accompaniment Manager will now be displayed.
6. At the far top left of the Red display, there is a drop down menu called 'ACC-Types'. Open this menu. Select 'MP3' from the list.
7. Now press the button in the bottom right corner labelled 'ACC Load'
8. The WERSI File Explorer will open (Light Blue back ground). Use the button 'Change Directory' to navigate to your CD/DVD or USB drive.
9. Select the folder marked 'MP3'. The 6 Christmas Collection MP3 will be shown on the right hand side.
10. Press the 'Select All' button.
11. Then press the 'OK' button.
12. The Yellow Save screen will open. Select a free location and Import the MP3 Sequences. (Be careful not to overwrite any existing styles).