

Virtuoso

Soloists

Virtuoso Soloists (Expression Performance Registrations)

Congratulations on purchasing the new 'Virtuoso Soloist Expression Performance Registrations' software. A library of new registrations have been compiled to showcase the Solo sounds within the OAS 7 factory sound library. Very often people want to be able to just sit down at their instrument, select a registration and play. Now you can.

WERSI Direct are very pleased to present the first title in the new Registration Software series.

IMPORTANT! This software only works with the OAS 7 software R7.41 upwards.

Loading Instructions

Loading from CD/DVD.

1. Insert Virtuoso Soloists CD/DVD or USB device into the CD/DVD or USB drive.
2. Press the 'Settings' tab at the top right corner of the Main Display.
3. Press the 'OAS Database' Button in the central column of buttons.
4. A new small window will appear. Press the button marked 'Total Preset Manager' at the bottom of the centre of the new window.
5. The Total Manager will now be displayed.
6. Press the 'Import' button.
7. Select the 'Drive' that is your instruments CD/DVD or USB drive.
8. Once you have selected your CD/DVD or USB drive, the 40 Registration Total Presets will be displayed. Press the 'Select All' button.
9. Now that the Total Presets are highlighted in Red, press the 'Load' button.
10. A new window will be displayed. Please select a free slot to save the 40 Total Preset Registrations and press 'Save'. Please be aware that any Presets that currently occupy any of the slots that you select, will be overwritten. Please take care to select only free / vacant slots.

Registration Recall

Using Quickload

1. From the Main Display press the 'Quickload' button.
2. Press the 'Presets' button at the top of the screen (Left hand side)
3. Make sure that you have 'User Presets selected for the menu displaying the Preset content of your OAS instrument.
4. Scroll down to the new 'Virtuoso Soloists' in the slots that you have saved them to.
5. Select the Total Preset registration from the list and press the large 'Load' button in the bottom right hand corner.

Using 'Easy Preset'

1. From the Main Display press the 'Easy Preset' button.
2. Select the User Bank on the right hand side to navigate to the new registration Total Presets.
3. Simply select the desired registration displayed on the Easy Preset display for the entire instrument to be loaded instantly!

Registrations Overview

- | | |
|---|--|
| 1. Virtuoso 80's Electric Guitar | 21. Virtuoso Solo Trumpet |
| 2. Virtuoso Brass | 22. Virtuoso Spanish Guitar |
| 3. Virtuoso Chinese Flute | 23. Virtuoso Splendid Horns |
| 4. Virtuoso Classical Concert Guitar | 24. Virtuoso Steel Guitar |
| 5. Virtuoso Classical Guitar & Orch. | 25. Virtuoso Super-Art-Nylon Guitar |
| 6. Virtuoso Concert Harp | 26. Virtuoso Vienna Woods Zither |
| 7. Virtuoso Concert Harp Solo | 27. Virtuoso Violin Norwegian Folk |
| 8. Virtuoso Electric Guitar Ballad | 28. Virtuoso Violin Solo Sad |
| 9. Virtuoso English Horn | 29. Virtuoso Violin Solo |
| 10. Virtuoso Faure Flute + Orch. | 30. Virtuoso Western Steel Guitar |
| 11. Virtuoso Grand Piano | 31. Virtuoso Alto Sax Solo |
| 12. Virtuoso Hungarian Choir | 32. Virtuoso Baritone Sax Solo |
| 13. Virtuoso Irish Whistle | 33. Virtuoso Cello (Deep |
| 14. Virtuoso Orchestral Oboe | 34. Virtuoso Classical Cello |
| 15. Virtuoso Panflute 1 | 35. Virtuoso Female Opera |
| 16. Virtuoso Panflute 2 | 36. Virtuoso Mexican Trumpet |
| 17. Virtuoso Panflute Golden Gate | 37. Virtuoso Mixed Choir |
| 18. Virtuoso Pavane Woodwind | 38. Virtuoso Orchestral Trumpet |
| 19. Virtuoso Piano 80's | 39. Virtuoso Soprano Sax Solo |
| 20. Virtuoso Real Steel | 40. Virtuoso Soprano (Vocals) |